




To Add or Change a Menu Item

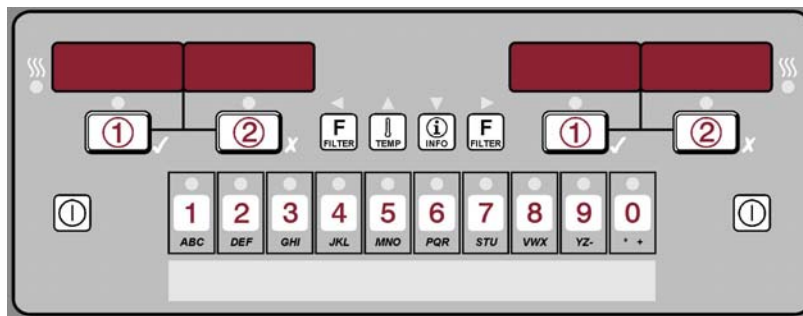

1. Press and hold and buttons until LEVEL - 1 shows in the display. Release buttons.
2. Displays show “LEVEL 1” and “ENTER CODE”. Enter code 1, 2, 3, 4. “PRODUCT” and “SELECTN” show in the displays.
3. Press button and ‘SELECT PRODUCT’ and “FR FRIES” or “NUGGETS” show in the displays.
4. and buttons scroll through the 40 products, or press the desired product button.
5. Press button and the product shows in the left display and “MODIFY?”, and “YES NO” shows in the right display. Press button to change this product, or press button to choose another product.
6. If button was pressed, use the product buttons to enter product name like entering text on your cell. Once the desired letter shows in the display, press button to continue to the next letter.
7. Once name is complete, press button and “COOK TIME” shows in the display. Use the product buttons to change the time in minutes and seconds, to a maximum of 59:59.
8. Press button and “TEMP” shows in the display. Press the product buttons to change the temperature. The temperature range is 190°F (88°C) to 380°F (193°C).
9. Press button and “COOK ID” shows in the display. Enter abbreviated product name (Ex: NUG)
10. Press button and “DUTY 1” shows in the display. Press the product buttons to set an alarm (Ex: 0:30 sets an alarm at 30 seconds after the start of the cook cycle).
11. Press button and “DUTY 2” shows in the display, and a second alarm can be programmed.
12. Press button and “QUAL TMR” shows in the display. Press product buttons to set holding time.
13. Press button and “AIF DISABLE” shows in the display and “YES” or “NO”. Using and buttons, change the display to “YES” if that product is to not be included in the automatic intermittent filtration counts, or “NO” if it is to be included.
14. Press button and “ASSIGN BTN” shows in the display, along with the product (ex: NUGGETS). If this product already has a product button assigned to it, that LED will be lit. To assign other product buttons to that product, press and hold the product button for 3 seconds and that LED stays lit. To remove a product from a button, press and hold the product button with a lit LED and the LED goes out.
15. To program another product, press button and “SELECT PRODUCT” shows in display. Continue with step 3 above.
16. Press button 3 times to end programming.