


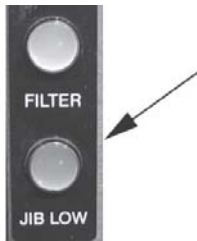


## CHANGING THE JUG IN BOX (JIB)

1. Display shows “CHECK JIB” and yellow light comes on, replace the JIB.
2. Open RH door and slide JIB from shelf. Depress release button and disconnect hose from tube. Pull fill tube from JIB and pour remaining oil into the vats equally.
3. Prepare new jug to accept the tube and insert tube into new jug. Then slide new jug into position under fryer. Depress release button and connect fill hose to fill tube.



## FILLING THE JUG IN BOX (JIB) ON BULK SYSTEM FRYERS (RTI)

1. Display shows “CHECK JIB” and yellow light comes on, fill the JIB.
2. Open the door, that has the RTI switch.
3. Press & hold the ADD side of the RTI switch to add oil to the JIB

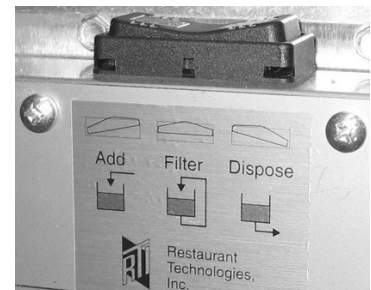


Any problems, refer to manual or contact Henny Penny Corp. 1-800-417-8405, or 937-456-8405.

### NOTICE

These instructions are meant to be guidelines, not complete operating instructions. Read and understand the complete operator's manual supplied with each unit.


## 更换油罐 (JIB)

1. 显示器显示“CHECK JIB (检查 JIB)”，黄色灯亮起，更换 JIB。
2. 打开右侧门，并将 JIB 从架子上滑出。按下释放按钮，并将软管从注油管上断开。拉出 JIB 中的注油管，然后将剩余油平均注入各个锅槽中。
3. 准备新的油罐，并将注油管插入新油罐。然后将新的油罐滑进炸锅下方位置。按下释放按钮，将注油软管连接到注油管上。

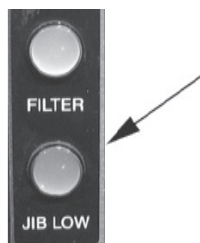

## 为 BULK 系统炸锅 (RTI) 上的油罐 (JIB) 加油

1. 显示器显示“CHECK JIB (检查 JIB)”，黄色灯亮起，给 JIB 加油。
2. 打开门，门上有 RTI 开关。
3. 持续按 RTI 开关边上的 ADD 键，给 JIB 加油。

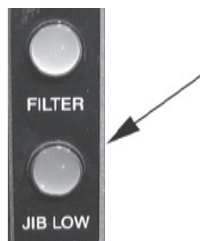

如有任何问题，参阅手册或联系恒鹏设备有限公司 1-800-417-8405 或 937-456-8405。

### 提示

这些说明意指准则，而非全部操作说明。  
阅读并理解随每套设备附送的完全操作手册。